

INSTALLATION MANUAL

6316




DC 30W
MOTOR MOTOR SPEED



230V | DC MOTOR 30W | IP20 | Metal body | ABS blades | Rod mounted

- Maximum air flow rate 100m³/min
- Service value 2,8/W
- Standby power consumption 0,5W
- Fan sound power level 45dB(A)
- Maximum air velocity 2,6 m/sec.
- Max RPM 185

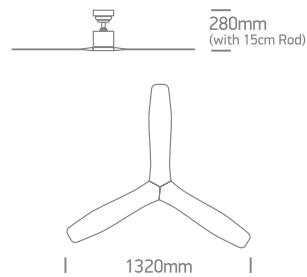

one
LIGHT

1 Install the fan blades and tighten screws.	2 Install ceiling bracket.	3 Remove the R clip from the pin. Then remove the pin from the rod.
4 A Place the parts on the rod. B Pass wires through rod.	5 A Put the rod into the motor and install the pin and R clip. B Tighten all the nuts and screws.	6 A Hang the fan onto the ceiling bracket. B Lock into place.
7 A Hang the fan onto the ceiling bracket. B Lock into place.	8 Connect wires.	9

Warnings:


1. Make sure that the product is installed properly before connecting to electricity.
2. Maintenance and installation should only be carried out by a professional electrician.

www.1-light.eu

INSTALLATION MANUAL

6316


9

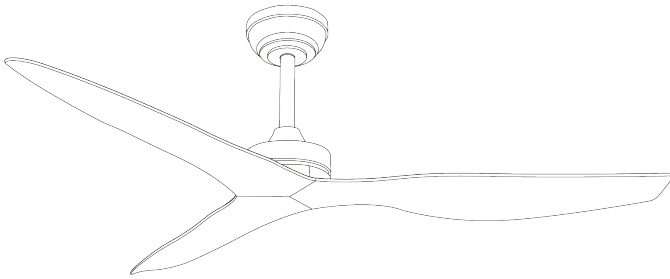

REMOTE CONTROL

Requires 2xAAA batteries. Remove batteries if not used for long period of time.


- 1 LED indicator
- 2 ON/OFF
- 3 Mute Sound
- 4 Fan speeds: To turn fan ON 1(lowest) to 6 (highest)
- 5 Fan ON / OFF
- 6 Breeze: Fan speeds automatic cycle between 1 to 6
- 7 Reverse function for winter and summer
- 8 Timer: Fan stops after 2h/4h/8h

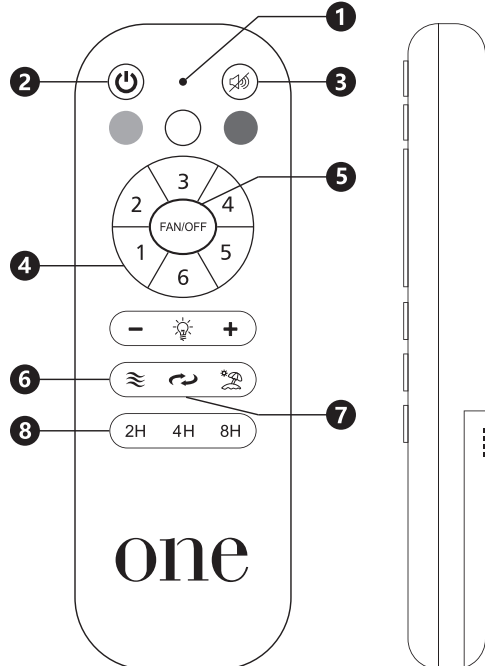

NOTE: To pair a remote to a receiver turn ON the power supply to the fan and press the ON/OFF and MUTE keys on the remote for 3 to 5 seconds. You will hear a beep.

PACKAGE CONTENTS


1

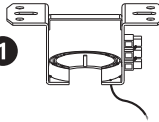

2



 3



4



 
5



6



7



8



9



A



B



C



- 1 Hanger bracket
- 2 Receiver
- 3 Rod assembly
- 4 Canopy
- 5 Canopy cover
- 6 Motor
- 7 Remote control + holder
+2 mounting screws
+1.5V (AAA)x2 batteries
- 8 Cover
- 9 Fan blades (3pcs)
- A Screws for blades
- B Mounting hardware
- C Blade balancing kit

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Maintenance and installation should only be carried out by a professional electrician.