
INSTALLATION MANUAL

89414


LED BUILT IN

230V | LED | 1W | IP20 | Emergency 3Hrs Maintained & Non-Maintained | Self-test | PC
Supplied with LiFePO4 3,2V 1,6Ah battery. Supplied with 4 stickers.

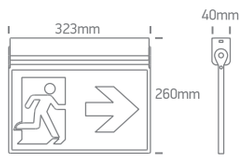


one LIGHT

1

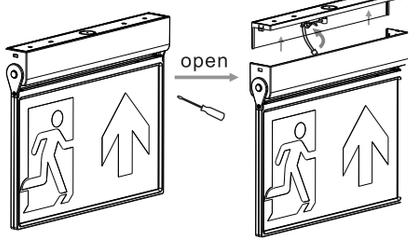


2 A. Make a wire hole on the cover.

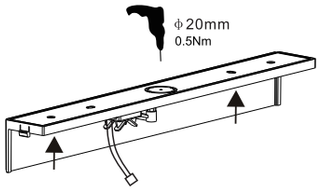


B. Install the cover on the ceiling/wall.

3 Connect the wires.

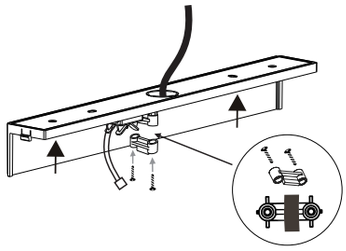


L : brown N : blue

4 Connect the battery cable.

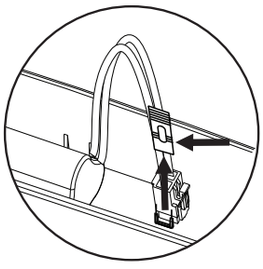


For Non-Maintained mode, remove the jumper. It is next to the battery cable.

5 For wall mounting, rotate fitting.

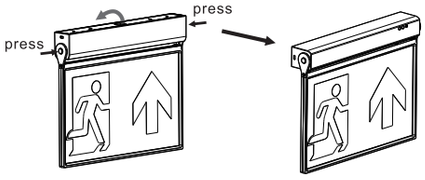

6 Plug the connector.

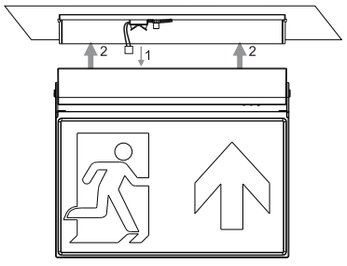

“LED indicator status” coding

GREEN LED	RED LED	G	R	STATUS	ACTION REQUIRED
Solid ON	OFF	●	○	OK	-
Normal Flash	OFF	◉	○	Charging	-
OFF	Solid ON	○	●	Battery disconnected / Duration test failure	Connect battery / Replace battery
Fast Flash	OFF	◎	○	Functional/Duration test in progress	-
Normal Flash	Normal Flash	◉	◉	Battery Temperature	Replace Battery
OFF	Normal Flash	○	◉	Light source fault	Replace Luminaire

◉ Normal flash=1Hz (about once/second)

◎ Fast flash=2Hz (about twice/second)

This is a self-test luminaire. Functional test is carried out automatically once a month and runs for 30 seconds. Full duration test is carried out automatically every 52 weeks. First full duration test is carried out automatically within the first 4 weeks after the luminaire being connected to mains voltage.

Warnings:

1. Make sure that the product is installed properly before connecting to electricity.
2. Do not cover the fitting.
3. Maintenance and installation should only be carried out by a professional electrician.